
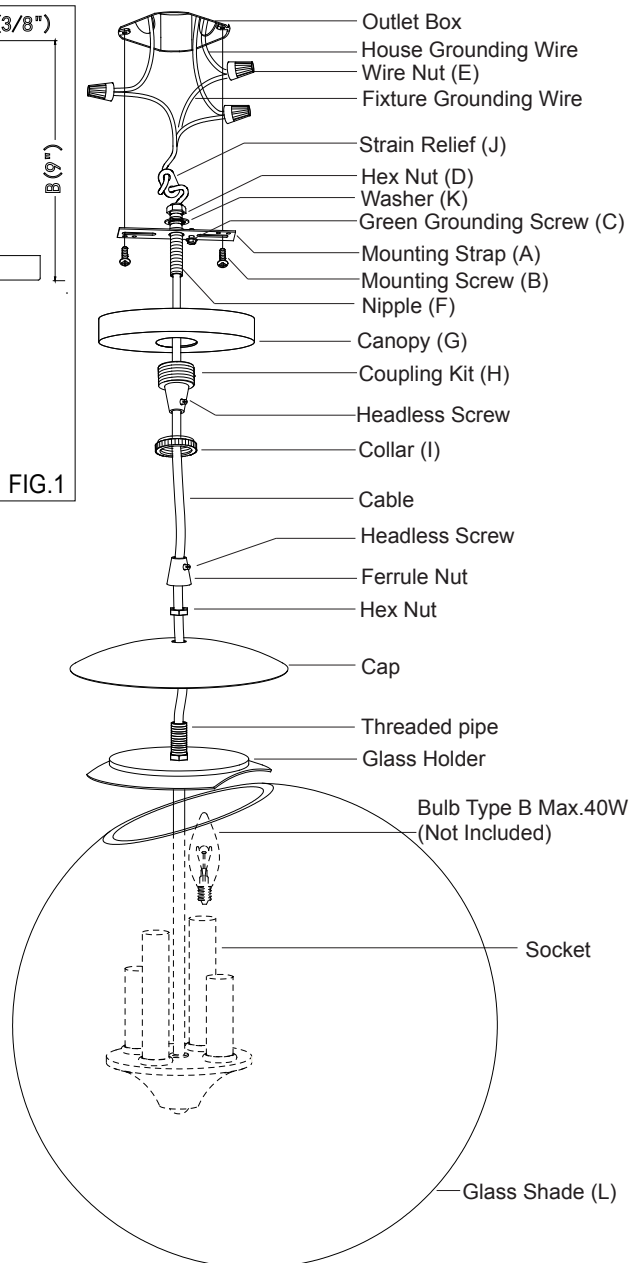
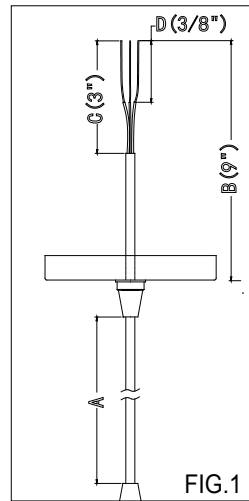


ASSEMBLY AND INSTALLATION INSTRUCTIONS

P0124 / P0125 / P0126


WARNING: Turn off the main power at circuit breaker before installing fixture.
AVERTISSEMENT: Coupez la source d'alimentation principale au panneau central de disjoncteurs avant d'installer le luminaire.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THESE INSTRUCTIONS.

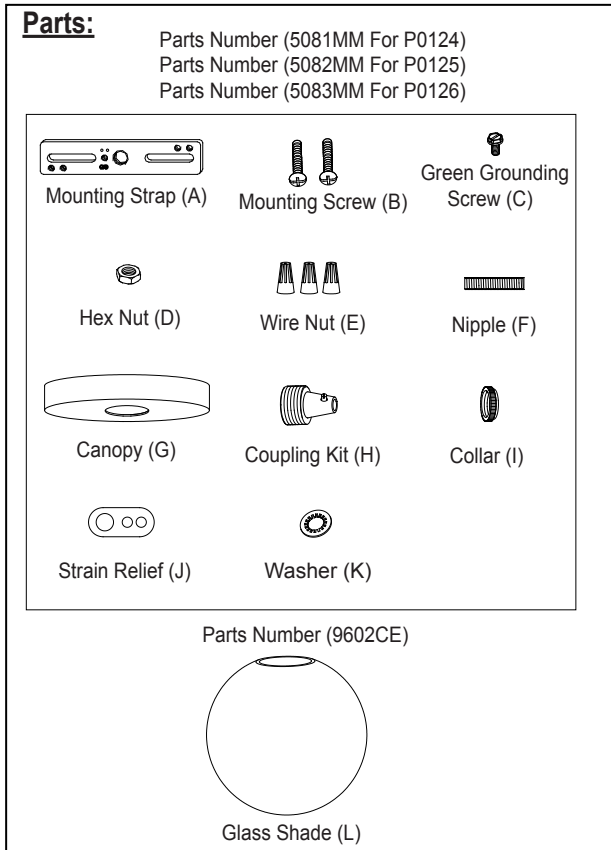

- Carefully remove the fixture from the carton and check that all parts are included.
- Thread the cable through the collar, coupling kit, canopy, nipple, mounting strap, washer, hex nut and two holes of the strain relief in order.
- Install the end of nipple by screwing into coupling kit.
- Attach the nipple to the mounting strap, then secure it with washer and hex nut.
- Measure the desired length of the cable (A) from the canopy to the top side of the ferrule nut and leave an additional 9" of cable (B) above the canopy (include the canopy). Then cut off the excess cable. (See Figure 1)
- Adjust strain relief at 9" position from the top of the cable.
- Mark the 3" of cord (C) from the top of the cord (B). cut carefully around cable and peel off outer insulation to reveal 3 inner wires.
CAUTION: Cutting too deep may damage the insulation layer of 3 inner wires.

8. Measure 3/8" down from end of inner wires, and Strip insulation to expose wire ends.
9. Pull the cable (A) down slightly until the strain relief touches the hex nut of the nipple, then tighten the headless screw onto the coupling kit to secure the cable.
Note: Adjust the strain relief inside the canopy to decrease or increase the length of cord that is exposed.
10. Attach the mounting strap to outlet box by using two mounting screws.
11. Pull out the source wires from the outlet box. Make wire connections using wire nuts as follows:
 - a. The clear wire marked "L" from the fixture to the black wire from the power source.
 - b. The clear wire with white line and marked "N" from the fixture to the white wire from the power source.
 - c. The grounding wire with green line and marked "⊕" from the fixture to the green grounding wire from power source.Carefully put wires back into the outlet box.
12. Attach the canopy to the mounting strap: insert the coupling kit through hole, then secure by tightening collar.
13. Unscrew ferrule nut cap and hex nut from threaded pipe to release the cap.
14. Install bulb (not included). See relamping label at socket area or packaging for maximum allowed wattage.
15. Install glass shade: Tilt the glass shade and slide glass holder into the glass shade carefully, Make sure that the glass holder in the center of glass shade. Drop cap and secure with hex nut and ferrule nut, then tighten the headless screw onto the ferrule nut to secure the cable.
16. Turn on the power at the main fuse or circuit breaker box.

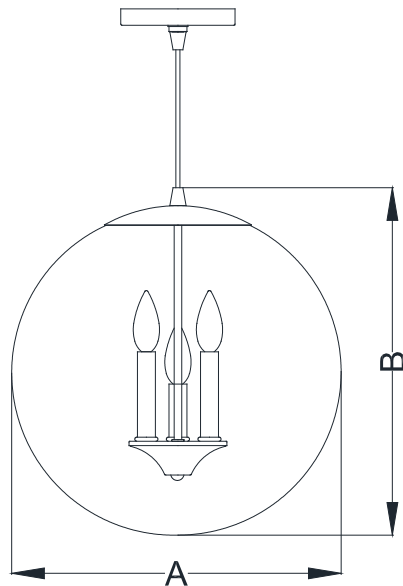

A: 15-3/4"

B: 16-3/4"